



Horizontal cross board will be on the inside of the loom

Extension cross piece comes with the loom extension

Loom cross beam which is on your loom will be moved to the bottom of the extension upright

Extension cross piece can be put into any of the holes. These holes are also used to adjust the depth of the loom extension. The more pattern shafts you use, the more the loom extension is extended.

Place the new upright against the loom's upright to drill the holes $5/16''$. The holes will then be about $1\ 3/8''$ in from the outside.

Loom warp beam holder can be removed from the loom.

Loom cross beam which is in the top back of your loom will be moved to the bottom of the extension upright.

Horizontal cross board will be on the inside of the loom.