


Washers typically are placed between the nut (wing nut or knob) and the wood. The threaded portion of the bolt typically points to the outside of the loom or stand or frame

Carriage bolt (rounded head with small square shank under. Be sure the square part 'sinks' into the wood to keep the bolt from turning. Use a small hammer is need be to tap it in



On the cross piece there generally is no washer. The short (about 1.75 inches) flat headed bolt is used. Line up the slot in the barrel with the bolt when assembling.

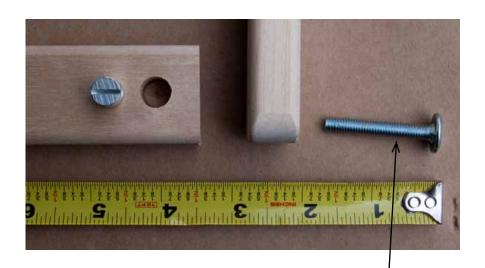

The long bolt is about 3 inches long and is used to attach the back legs of the stand to the loom and heddle bracket. The washer is on the outside. Use the black knob to secure the assembly.