
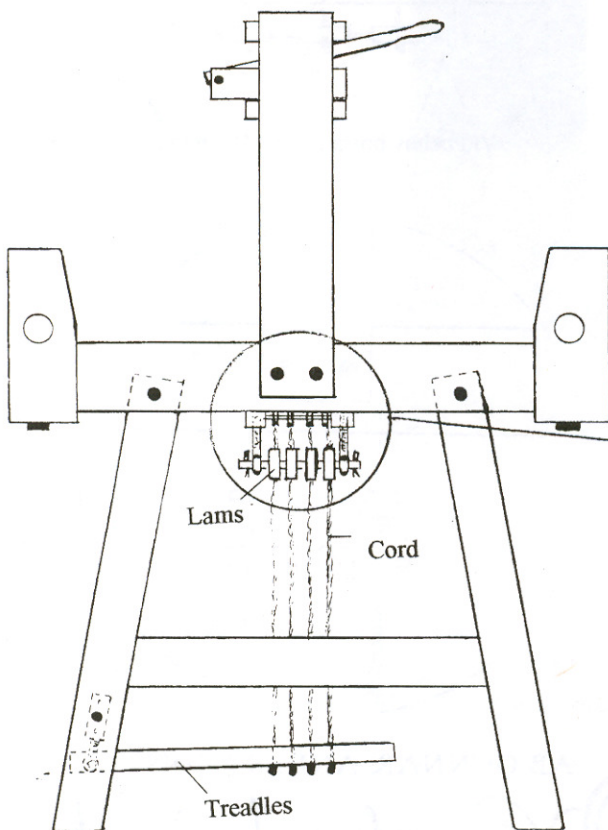


# Assembling instructions

## Treadle kit Victoria

CONTENTS	
2	Side bars with wheels
4	Lams
4	Treadles
1	Rod for treadles 300 mm
1	Rod for lams 100 mm
2	Rod for wheels 75 mm
4	Hitch pin clips
4	Nails
8	Wheel
10	Plastic washers
8	Wooden bushings
4	Wood screws
2	Screw eyes
Cord and pegs are not included	

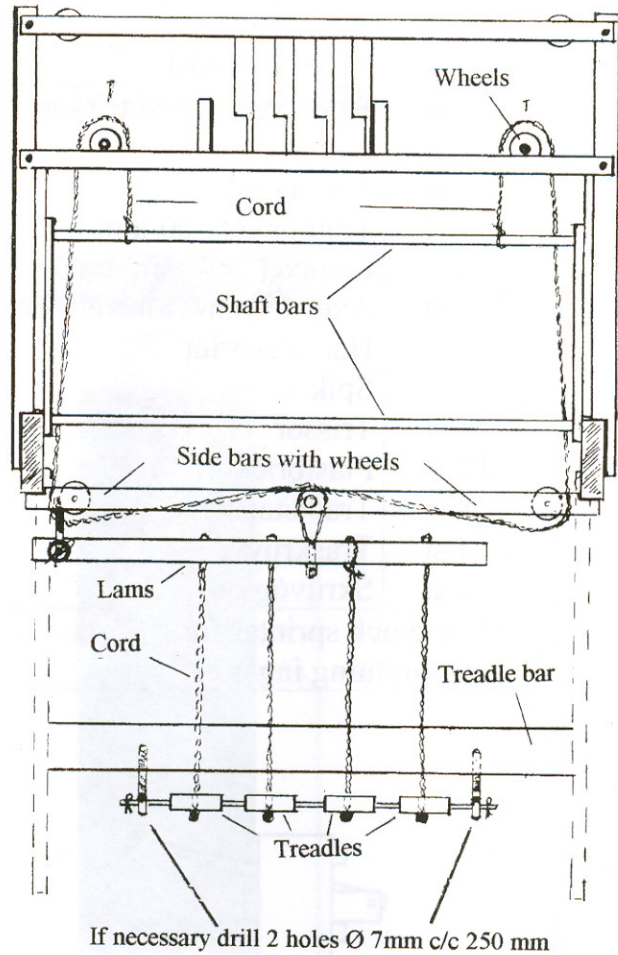

AB GUNNAR ANDERSSONS

Vävskedsfabrik

OXBERG · S · 792 94 · MORA · SWEDEN

TFN 0250 · 700 21 · FAX 0250 · 700 00

