



1. Fit the wider cross piece into the upright. Note location of holes.

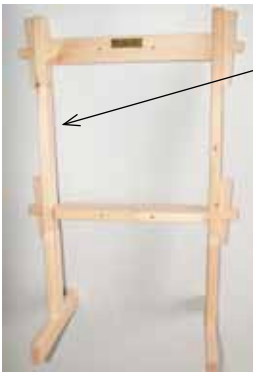



2. Secure with wedge.

3. Do the same with the top cross piece, noting location of holes.



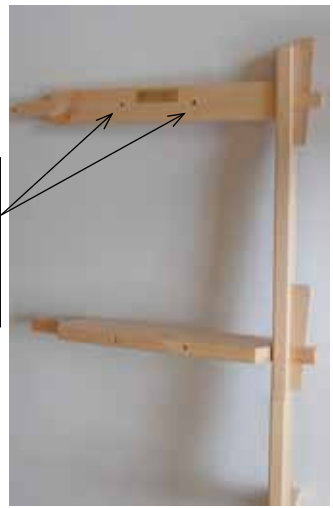


4. Attach the second side piece in the same manner with small holes on inside.

5. Insert small dowels (2) into holes in legs and place cross piece over them

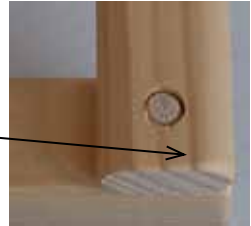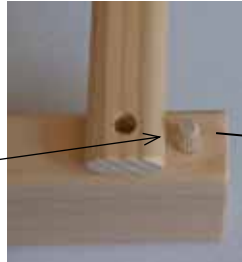

6. Insert longer metal rods into the top cross piece and the shorter metal rods into the lower cross piece. Note the location of the box.

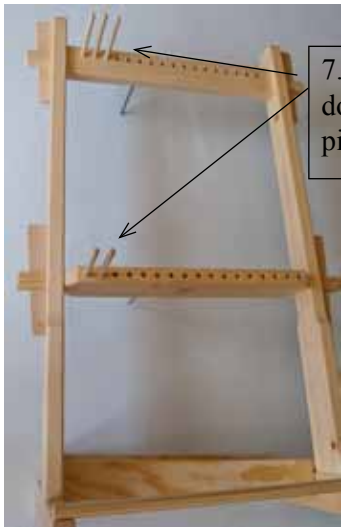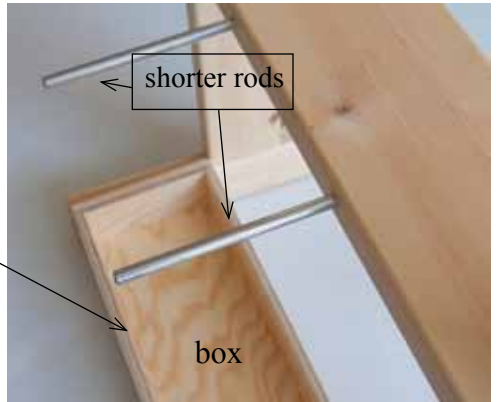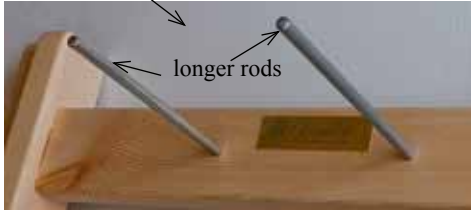

7. Insert multiple dowels in the cross pieces

8. Mount the 'C' shaped metal rods (2 ea.) These metal brackets typically mount on the same side as the metal pins but you can mount them on the multiple dowel side if you prefer. Your choice. Consider pre-drilling a small pilot hole for the nail or using small screws.



